



SAUCE WARMER

USER MANUAL

MODEL NO: HX8765 / HX8573 / HX8327 / HX8016

SAFETY INSTRUCTIONS

- Ensure the machine is safely grounded before use.
- Do not wash the machine directly with water.

TECHNICAL SPECIFICATION

NO.	MODEL	SPECIFICATIONS
1	HX8765 (1 sauce warmer)	Voltage: 220v Frequency: 50Hz Power: 225W Dimensions: 160x220x230mm Temperature: 0-85°C
2	HX8573 (2 sauce warmers)	Voltage: 220v Frequency: 50Hz Power: 450W Dimensions: 330x220x230mm Temperature: 0-85°C
3	HX8327 (3 sauce warmers)	Voltage: 220v Frequency: 50Hz Power: 675W Dimensions: 440x220x230mm Temperature: 0-85°C
4	HX8016 (4 sauce warmers)	Voltage: 220v Frequency: 50Hz Power: 900W Dimensions: 580x220x230mm Temperature: 0-85°C

OPERATING INSTRUCTIONS

- After connecting to the power supply, the power indicator will illuminate.
- Turn on the heating switch to set the desired temperature for food warming.
- Air convection within the machine ensures a constant temperature.
- To enhance food presentation, turn on the light located at the top of the warmer.
- After use, ensure to turn off the power supply and clean the machine.

Note: If any abnormal issues arise during operation, discontinue use and consult a professional.

CLEANING & MAINTENANCE

- Always disconnect the power supply before cleaning.
- Wipe the exterior with a damp cloth.
- Regularly check and clean the water tray to prevent build-up.

SCAN ME!



www.a1equipment.co.uk

A1 Equipment Ltd
Unit 6, Prologis Park Eastman, Eastman Way,
Hemel Hempstead, HP2 7DU



A1 EQUIPMENT