



**DUTCH PANCAKE -
POFFERTJES
MAKER**

USER MANUAL

MODEL NO: HX8357

SAFETY INSTRUCTIONS

- Ensure the supply voltage matches the rated voltage of the device.
- Use a properly grounded three-pin socket installed near the equipment.
- The device operates with a temperature control accuracy of $\pm 5\%$ at 300°C .
- The device includes a timer that indicates the operating time. Note that it does not affect the electrical performance of the device.
- Ensure the equipment casing is properly grounded for safety.
- The contact areas may become hot during operation. Keep children away from the equipment.

TECHNICAL SPECIFICATION

Model	HX8357
Power (V)	220
Output (KW)	1.8
Size	600x320x170mm
G.W/N.W	10.3/9.4kg
Cooking Plate (mm)	420x90x2
Temperature $^{\circ}\text{C}$	0-300
Timer	0-5

OPERATING

During the first use, the equipment may emit smoke due to the oil used in the aluminum plate embossing process. This is normal and does not affect the device's functionality.

1. Plug the device into a power socket.
2. Press the power switch to activate the device.
3. Rotate the thermostat knob to set the desired temperature.
4. The device will begin heating. Once the set temperature is reached, the device will automatically stop heating. It will resume heating if the temperature drops below the set point, maintaining the desired temperature.

Attention: If any abnormality occurs during operation, stop using the device immediately. Resume use only after troubleshooting and resolving the issue.


MAINTENANCE

- Handle the product carefully during transportation to avoid excessive vibration or impact.
- Store the packaged product in a well-ventilated warehouse, free from corrosive gases. Avoid long-term storage in open-air environments.

TROUBLESHOOTING

NO.	Fault	Probable Cause	Solution
1	The power switch is on, the indicator light is on, but it is not heating	1. Thermostat is faulty. 2. A heating element is broken.	1. Replace the thermostat. 2. Replace the faulty heating element (for 220V, two heating elements of 110V each are used in series).
2	The power switch is on, the indicator light is on, but temperature is setting is not working	Faulty temperature control.	Replace the temperature control.
3	The heating works, but the indicator light is off.	Faulty indicator light.	Replace the indicator light.
4	The power switch is on, but neither the indicator light nor the heating works.	1. Power supply issue. 2. Blown fuse.	1. Check and restore the power supply. 2. Replace the fuse.

ELECTRICAL DIAGRAM

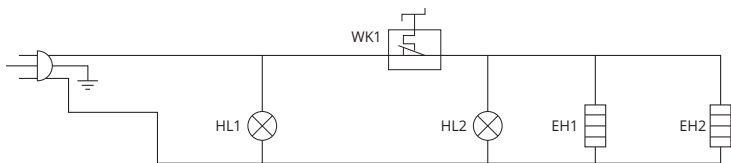

HL1 - Power Light


HL2 - Heating Power Indicator Light

WK1 - Temperature Control

EH2 - Upper heating Element

EH2 - Bottom Heating Element

MACHINE DIAGRAM

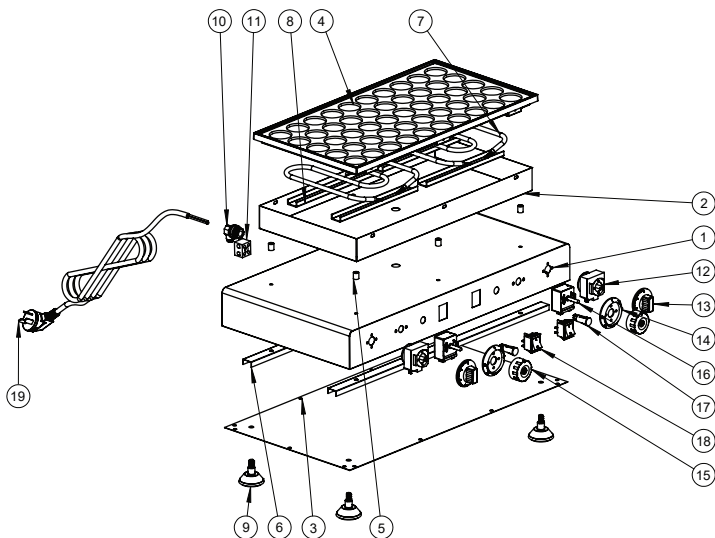

NO.	ITEM
1.	Pedestal
2.	Lower Support of the Heating Tube
3.	Bottom Sealing Plate
4.	Muffin Maker Casting With 50 Holes
5.	Supporting Tube
6.	Lower Stiffener
7.	Heating Tube
8.	Heater Pressure Plate
9.	Feet
10.	Lock Head With Card Slot
11.	Eye Terminal
12.	Timer
13.	Timer Button
14.	Bench Dial
15.	Table Knob
16.	Temperature Controller
17.	Indicator Light (Diameter 13)
18.	On-Off Switch
19.	Power Cord with Plug

SCAN ME!



www.a1equipment.co.uk

A1 Equipment Ltd
Unit 6, Prologis Park Eastman, Eastman Way,
Hemel Hempstead, HP2 7DU



A1 EQUIPMENT